




Vaccine Tips

September 2019

Digital Data Loggers (DDLs) help protect vaccines. Are you doing your part?

- ✓ **Configure alarm settings** for the temperature scale used to monitor temperatures (Celsius/Fahrenheit).
- ✓ **Turn on alarms** so you know if the temp goes too low or too high.
- ✓ **Take immediate action** if an alarm goes off.
- ✓ **Document all temperature excursions** in SHOTS.
- ✓ **Make sure your data logger is plugged-in** and recording temperatures after each download.
- ✓ **Have a battery operated DDL** for monitoring temperatures during transport.
- ✓ Make sure every **DDL has a valid & current Certificate of Calibration**.
- ✓ **Keep VFC-related temperature documentation**, including temperature logs, electronic data logger files and DDL Certificates of Calibration, for three years.

Settings	Refrigerator	Freezer
LO	35.9°F (1.9°C)	-58.1°F (-50.1°C)
HI	46.1°F (8.1°C)	+5.1°F (-14.9°C)

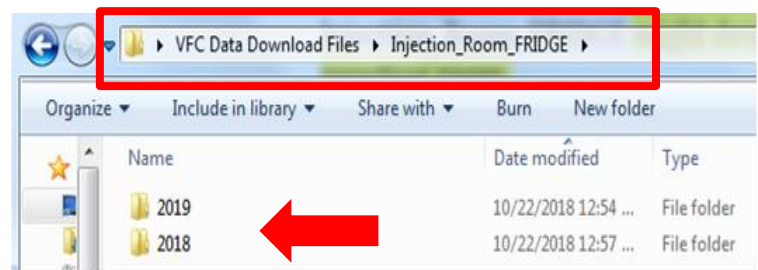

Review Monitoring Storage Unit Temperatures in the POM



California Department of Public Health
Immunization Branch
Vaccines for Children (VFC) Program
850 Marina Bay Parkway
Richmond, CA 94804

Toll Free Phone:
877-2GET-VFC (877-243-8832)

Toll Free Fax:
877-FAXX-VFC (877-329-9832)